

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power window	After reconnecting or changing the battery	P. 76
Maintenance data (U.S.A. only)	After the maintenance is performed	P. 385
Tire pressure warning system	When changing the tire inflation pressure by changing traveling speed	P. 410

